

Conversion to TemperatureSensor 63 & 83

Conversion to TemperatureSensor 63

Topnumber for TemperatureSensor 63: 6163XXXXXXXX

Description	65/66-00-0XX-XXX		TemperatureSensor 63	
2 pcs. Direct Short sensor with 1.5 m cable	11	66-00-0F0-XXX	51	61-63-D0-051-XXX
2 pcs. Direct Short sensor with 3 m cable	12	66-00-0G0-XXX	52	61-63-D0-052-XXX
3 pcs. Direct Short sensor with 1.5 m cable	15	66-00-0Q3-XXX	55	61-63-D0-055-XXX
3 pcs. Direct Short sensor mm with 3 m cable	16	66-00-0Q4-XXX	56	61-63-D0-056-XXX
2 pcs. ø5.8 mm pocket sensor with 1.5 m cable	31	65-00-0A0-XXX	81	61-63-D0-081-XXX
2 pcs. ø5.8 mm pocket sensor with 3 m cable	32	65-00-0B0-XXX	82	61-63-D0-082-XXX
2 pcs. ø5.8 mm pocket sensor with 5 m cable	33	65-00-0C0-XXX	83	61-63-D0-083-XXX
2 pcs. ø5.8 mm pocket sensor with 10 m cable	34	65-00-0D0-XXX	84	61-63-D0-084-XXX
3 pcs. ø5.8 mm pocket sensor with 1.5 m cable	35	65-00-0L0-XXX	85	61-63-D0-085-XXX
3 pcs. ø5.8 mm pocket sensor with 3 m cable	36	65-00-0M0-XXX	86	61-63-D0-086-XXX
3 pcs. ø5.8 mm pocket sensor with 5 m cable	37	65-00-0N0-XXX	87	61-63-D0-087-XXX
3 pcs. ø5.8 mm pocket sensor with 10 m cable	38	65-00-0P0-XXX	88	61-63-D0-088-XXX
2 pcs. ø5.8 mm pockets, length 65 mm		65-57-424		65-57-440
2 pcs. ø5.8 mm pockets, length 90 mm		65-57-427		65-57-441
2 pcs. ø5.8 mm pockets, length 140 mm		65-57-414		65-57-442

Conversion to TemperatureSensor 83

Topnumber for TemperatureSensor 83: 6183XXXXXXXX

Description	6556-XX-XXX		TemperatureSensor 83	
2 pcs. 4-wire sensor, length 65 mm			C1	61-83-D0-0C1-XXX
2 pcs. 4-wire sensor, length 90 mm	B1	6556-42-XXX	C2	61-83-D0-0C2-XXX
2 pcs. 4-wire sensor, length 140 mm	B2	6556-43-XXX	C3	61-83-D0-0C3-XXX
2 pcs. 4-wire sensor, length 180 mm	B3	6556-44-XXX	C4	61-83-D0-0C4-XXX
2 pcs. Pt500 inserts only		6556-40-XXX	CA	61-83-D0-0CA-XXX

Conversion from MULTICAL® 302 to TemperatureSensor 63

Description	MULTICAL® 302	TemperatureSensor 63	
2 pcs. ø5.2 mm sensor with 1.5 m cable and composite union	Q9	71	61-63-D0-071-XXX

Example: Direct Short sensor with MULTICAL® configuration number 11 can be converted to TemperatureSensor 63 with MULTICAL® configuration number 51.