


## PLC/router modul idriftsættelse

Før idriftsættelsen, kontrollér at modulet er monteret korrekt og at spændingen er tilsluttet.

Midt på PLC/router modulet findes en trykknop og øverst på modulet er der tre lysdioder (LED).


Hold trykknappen inde nogle få sekunder indtil LED'en yderst til venstre lyser. Slip herefter trykknappen. Når LED'en efter nogle få sekunder slukkes og tændes igen er installationen af PLC/router modulet gennemført.

**Kamstrup 351 Combi,  
685-251-xx-xx-xxx**

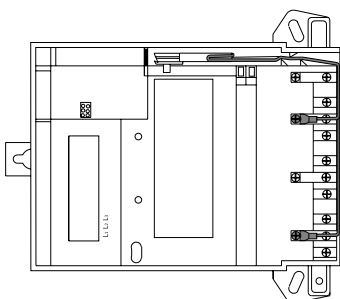


*Forsyningsledningerne til PLC/router modulet monteres på klemme 2 og 8 i måleren.*

**Kamstrup 351 Combi,  
685-351-xx-xx-xxx**

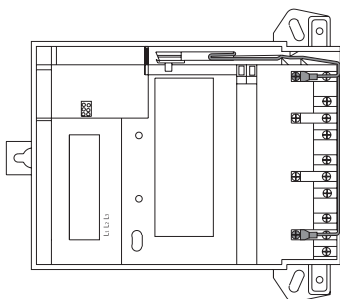


*Forsyningsledningerne til PLC/router modulet monteres på klemme 2 og 11 i måleren.*

**Kamstrup 382, 685-282-zz-zz**

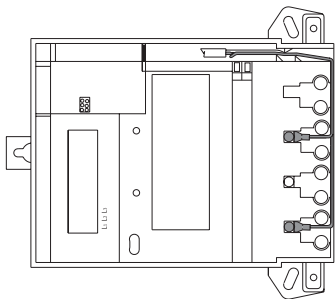

*Forsyningsledningerne til PLC/router modulet monteres på klemme 2 og 8 i måleren.*

**Kamstrup 382, 685-382-zz-zz**

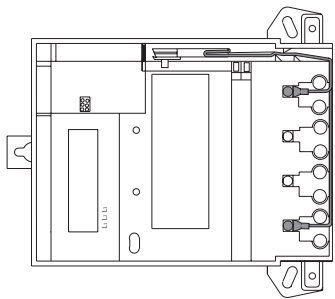

*Forsyningsledningerne til PLC/router modulet monteres på klemme 2 og 11 i måleren.*

Tilslutning/Connection

**PLC/router**

Dansk/English



# Kamstrup

Kamstrup A/S  
Industrivej 28, Stilling  
DK-8660 Skanderborg  
TEL: +45 89 93 10 00  
FAX: +45 89 93 10 01  
info@kamstrup.com  
www.kamstrup.com


## Commissioning of the PLC/router module

Before commissioning check that the module is mounted correctly and that voltage is connected.

In the middle of the PLC/router module you will find a push button and at the top of the module there are three light-emitting diodes (LED's).


Press the push button for a few seconds until the LED at the left lights. Release the push button. When the LED after a few seconds turns off and on again, installation of the PLC/router module is complete.

**Kamstrup 351 Combi,  
685-251-xx-xx-xxx**

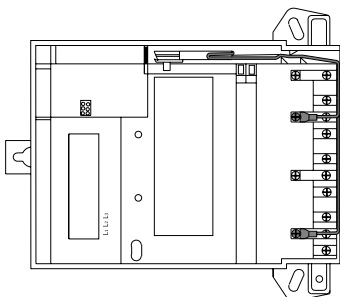


*The supply mains to the PLC/router module are mounted on terminals 2 and 8 in the meter.*

**Kamstrup 351 Combi,  
685-351-xx-xx-xxx**

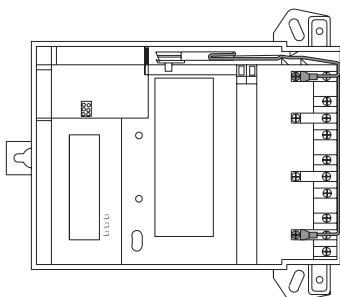


*The supply mains to the PLC/router module are mounted on terminals 2 and 11 in the meter.*

**Kamstrup 382, 685-282-zz-zz**

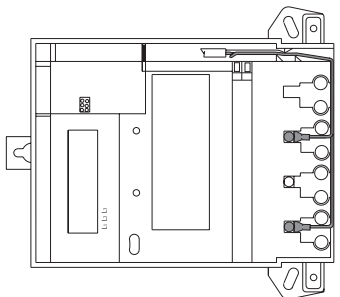

*The supply mains to the PLC/router module are mounted on terminals 2 and 8 in the meter.*

**Kamstrup 382, 685-382-zz-zz**

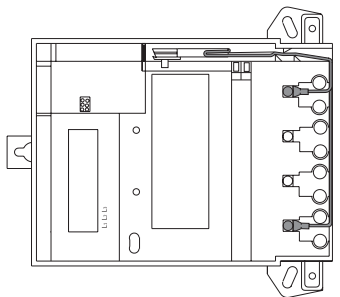

*The supply mains to the PLC/router module are mounted on terminals 2 and 11 in the meter.*

# DK - GB