

Installation guide

• **Restarting a meter**



## Restarting a meter

An OMNIPOWER® electricity meter can be restarted via METERTOOL OMNIPOWER® or by disconnecting the supply voltage to the electricity meter.

### Restart OMNIPOWER® via METERTOOL OMNIPOWER®

- 1 Start**  
Open the software METERTOOL OMNIPOWER®.
- 2 Connect**  
Connect an optical read-out head to the USB port on your PC and to the optical port on OMNIPOWER®.
- 3 Import**  
Import the encryption keys of the meter.
- 4 The METERTOOL OMNIPOWER® solution**  
Select the menu item "Tools".
- 5 The METERTOOL OMNIPOWER® solution**  
Click "Reset".
- 6 The meter display**  
In the meter display, the check sum of the meter firmware, firmware number and version are shown for 5 seconds. Then, the meter restarts.

### Restart OMNIPOWER® by disconnecting the supply voltage to the electricity meter

- 1 Disconnect**  
Disconnect the supply voltage to the meter.
- 2 Wait**  
Wait for about 10 seconds until the display turns off.
- 3 Connect**  
Connect the supply voltage to the meter.
- 4 Start-up**  
The meter starts up.

## Nice to know

### Do you need help?

Please contact Kamstrup support



+45 89 93 11 10

Visit [kamstrup.com](https://www.kamstrup.com) for further info