


How to assign read rights of your encryption keys to another My Kamstrup account



You can manage and assign read rights of your encryption keys to another organization through the EKS portal. To do this, you must be an EKS superuser. For details on becoming a superuser, visit the My Kamstrup FAQ.

Assign read rights to third party

1. Go to mykamstrup.com and log in.
2. Select "ENCRYPTION KEYS" on the left-hand menu.
3. Select the meter(s) to assign read rights to the encryption keys, and click the "Read rights" button.
4. Click "Assign".
5. Enter the customer's My Kamstrup email address.
6. If the customer isn't registered in My Kamstrup, they will receive an email with login details.

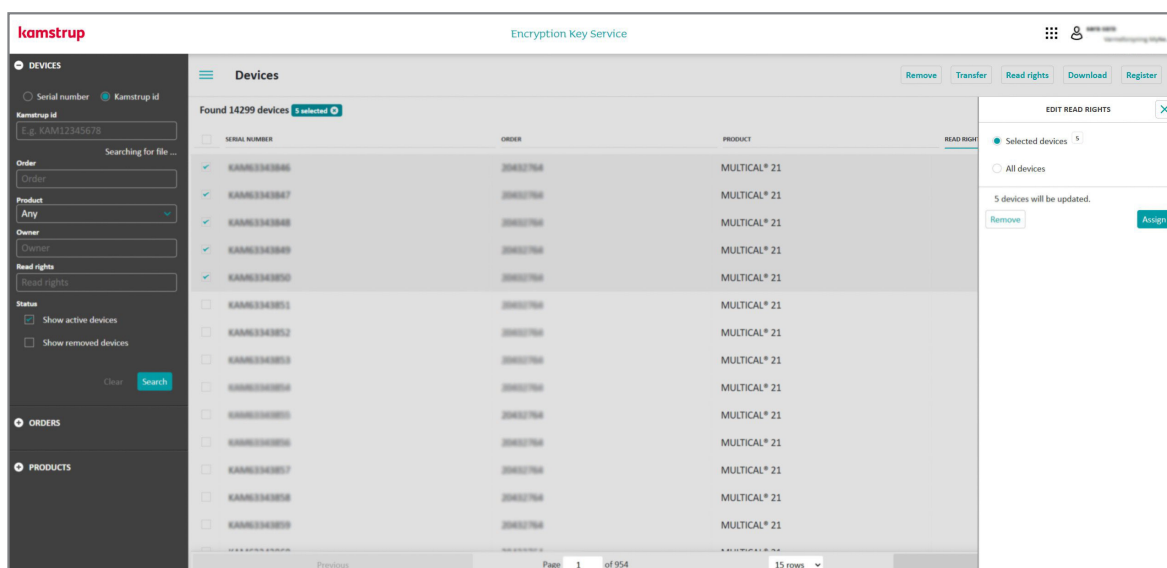

Kamstrup A/S
Industrivej 28
DK-8660 Skanderborg
T: +45 89 93 10 00
E: info@kamstrup.com
W: kamstrup.com